



©2001  
 M&H Electric Fabricators, Inc.  
 All rights reserved.

This design and drawings included in this assembly are the exclusive property of M&H Electric Fabricators, Inc. No part of this design or drawings may be reproduced without the express permission of M&H Electric Fabricators, Inc.

INSTRUCTION SET 92963734 # 35836 REV 1.1 8/1/85

**M&H ELECTRIC FABRICATORS, INC.**  
 13537 Alondra Blvd, Santa Fe Springs, CA 90670  
 Phone (562) 929-9232 Fax (562) 929-9272

**92963734**

# WIRE USAGE CHART

92963734

WIRE	WIRE COLOR	GA.	CIRCUIT DESCRIPTION
1A	dk green	18	Starter "RES" terminal to ballast resistor
1B	dk green	18	Coil "+" terminal to ballast resistor
2	black	10	Starter "BAT" terminal to ignition switch "BAT" terminal
4A	tan	18	Ignition switch to ballast resistor
4B	tan	18	Ignition switch to oil pressure indicator light
5	purple	12	Starter "SOL" terminal to ignition switch
7	dk blue	18	Oil pressure sender to oil pressure indicator light
8	dk green	18	Temperature sender to temperature gauge terminal