

LR directional light TO TURN SIGNAL SWITCH CONNECTOR Turn signal flasher

LF directional light Horn connection

INSTRUCTIONS:

Plug one end of the adapter into the mating connector at the base of the steering column. Plug the other end of the adapter into the mating connector on your dash harness.




Phone (562) 926-9552

Fax (562) 926-9572

INSTRUCTION SHEET STEERING COLUMN ADAPTER 1967-68 ALL CAR LINES **EXCEPT TRUCK**

92964902

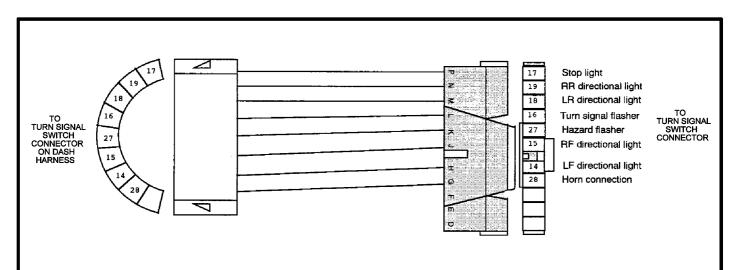

INSTRUCTIONS:

Plug one end of the adapter into the mating connector at the base of the steering column. Plug the other end of the adapter into the mating connector on your dash harness.



Phone (562) 926-9552

Fax (562) 926-9572

INSTRUCTION SHEET STEERING COLUMN ADAPTER 1967-68 ALL CAR LINES **EXCEPT TRUCK**