



**M&H** ELECTRIC  
FABRICATORS, INC.

13937 Alondra Blvd. Santa Fe Springs CA 90670  
Phone (562) 926-8552 Fax (562) 926-8572

INSTRUCTION SET 92963727 # 35829 REV 1.1 8/1/95

The design and documents included in this assembly are the exclusive property of M&H Electric Fabricators, Inc. No part of the M&H design or documentation may be reproduced without the express permission of M&H Electric Fabricators, Inc.

**92963727**

# WIRE USAGE CHART

92963727

<u>WIRE</u>	<u>WIRE COLOR</u>	<u>GA.</u>	<u>CIRCUIT DESCRIPTION</u>
1	black	10	Starter "BAT" terminal to ignition switch "BAT" terminal
2	dk blue	18	Oil pressure sender to oil pressure indicator light
3A	brown	18	Ignition switch to ballast resistor
3B	brown	18	Ignition switch to oil pressure indicator light
4A	dk green	18	Ignition switch to coil "+" terminal
4B	dk green	18	Ignition switch to ballast resistor
5	dk green	18	Temperature sender to temperature gauge terminal
6	purple	12	Starter "SOL" terminal to ignition switch "SOL" terminal