


INSTALLATION INSTRUCTIONS

ALTERNATOR ADAPTER HARNESS (P/N 37918)

PASSENGER SIDE TO DRIVER SIDE

1. Disconnect negative (-) battery cable.
2. Locate original alternator harness and cut off ring terminal and removed rubber boot from red wire. Discard rubber boot.
3. Crimp and **SOLDER** new terminal to red wire on original alternator harness. **Note: this is a critical circuit - the terminal must be soldered.**
4. Install clear connector to terminal, which was installed on red wire on original alternator harness.
5. Locate original alternator harness and cut off ring terminal from black wire.
6. Crimp and **SOLDER** new terminal to black wire on original alternator harness. **Note: this is a critical circuit - the terminal must be soldered.**
7. Install black connector to terminal, which was installed on black wire on original alternator harness.
8. Install Alternator Adapter Harness (P/N 37918) to alternator using appropriate connections.
9. Install Alternator Adapter Harness (P/N 37918) to original harness using corresponding connectors and wire colors.
10. We recommend the Alternator Adapter Harness (P/N 37918) to be routed clear of any moving parts or extreme heat. Routing along the top of the radiator core support is recommended.
11. Double check to make sure all connections are secure and wired properly.
12. Reconnect negative (-) battery cable.

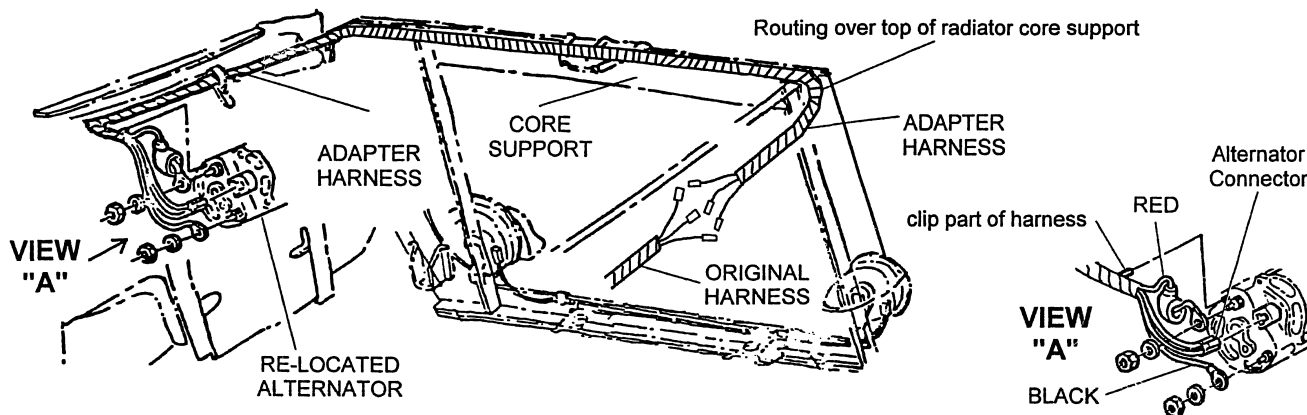

INSTRUCTION SHEET
92966260

M&H Electric
Fabricators, Inc.
AUTOMOTIVE WIRING SYSTEMS
Phone (562) 926-9552 Fax (562) 926-9572