

FIG 1


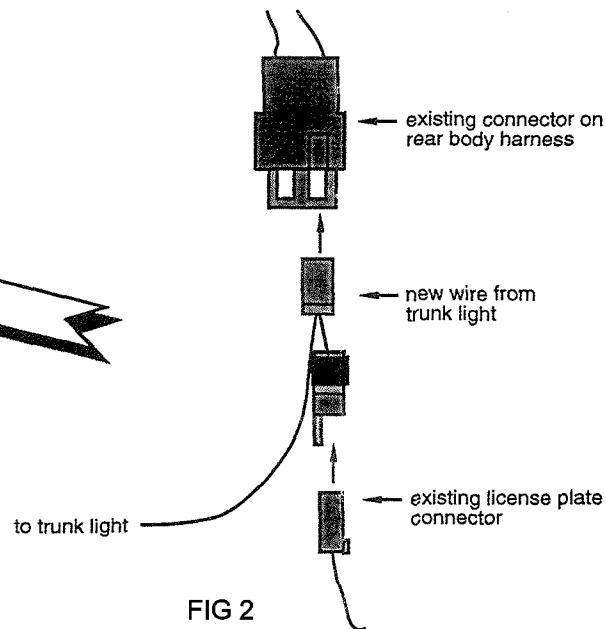


FIG 2

See FIG 1

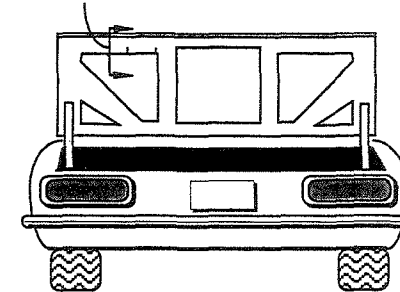

REAR VIEW OF CAR

Installation Instructions:

1. Find the light mounting location on deck lid and feed the wire down deck lid between sheet metal layers.
2. Mount light in position.
3. Continue routing wire to rear panel of car and locate the license plate connector on rear body harness.
4. Disconnect the license plate connector and plug in the female connector on your new trunk light, as shown in Fig. 2.
5. Plug the license plate light into the male connector on your trunk light harness, as shown in Fig. 2.
6. Use appropriate clips or tape to route wires in areas that are free of sharp edges. Be sure wire does not interfere with hinge assembly.

M&H Electric Fabricators, Inc.
 AUTOMOTIVE WIRING SYSTEMS
 Phone (582) 928-9552 Fax (582) 928-9572

TITLE
 INSTRUCTION SHEET
 TRUNK LIGHT ASSEMBLY
 1967-69 CAMARO CONVERTIBLE

DWG NO. **92964591**