

FIG1


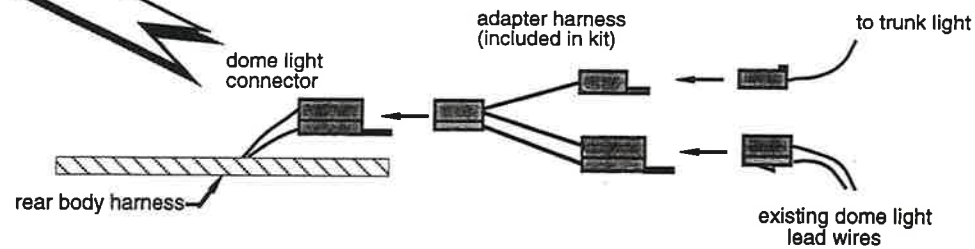


FIG 2

see FIG 1

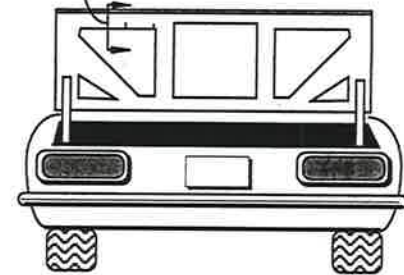

REAR VIEW OF CAR

M&H ELECTRIC
FABRICATORS, Inc.

AUTOMOTIVE WIRING SYSTEMS

13537 Alondra Blvd. Santa Fe Springs, Ca 90670
562-926-9552

Installation instructions:

- 1- Find the light mounting location on deck lid and feed wire down decklid between sheet metal layers.
- 2- Mount light in position shown.
- 3- Continue routing wire to rear wheel well area of car and locate the dome light connector on rear body harness.
- 3- Disconnect the dome light connector and plug in the adapter harness as shown in Fig. 2
- 4- Plug the dome light into the male connector on your trunk light harness, as shown in Fig.2
- 5- Plug the trunk light feed wire into the adapter harness as shown in Fig 2.
- 6- Use appropriate clips or tape to route wires in areas that are free of sharp edges. Be sure wire does not interfere with hinge assembly.

PART #

92964592

DESCRIPTION:

**TRUNK LIGHT ASSEMBLY
1967-69 CAMARO COUPE**

28180 instruction sheet Rev 2.0 6/11/99