

1. Disconnect rear lamp harness at rear frame rail.
2. Plug trailer lamp wiring adapter in between intermediate & rear lamp harness as shown.
3. Secure trailer lamp wiring adapter to frame rail with tie straps (not included).

Brown = common to tail & license plate lamp.
 Light green = back up lamps
 Dark green = right hand stop & directional signal
 Yellow = left hand stop & directional signal

1967 - 1982 CHEVY TRUCK, FLEETSIDE & STEPSIDE ONLY (PART #39374)

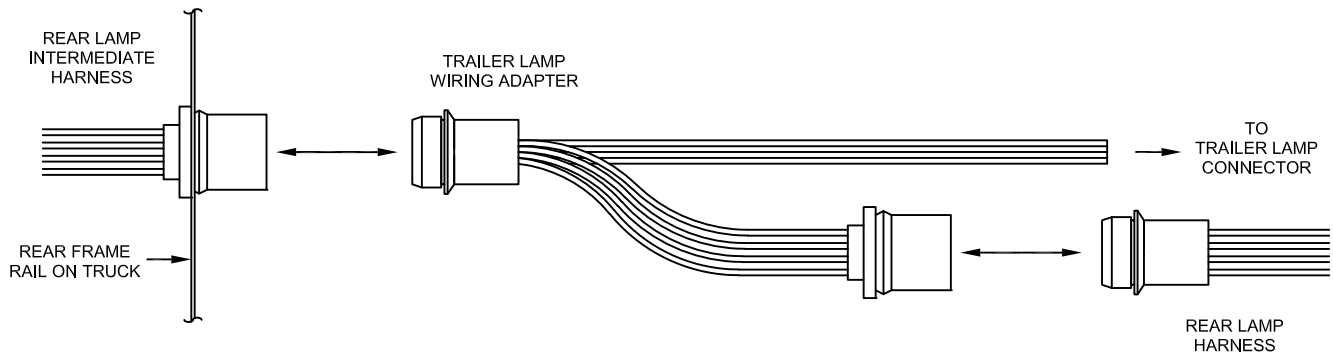


FIGURE 1

1962 - 1966 CHEVY TRUCK, FLEETSIDE & STEPSIDE ONLY (PART #39375)

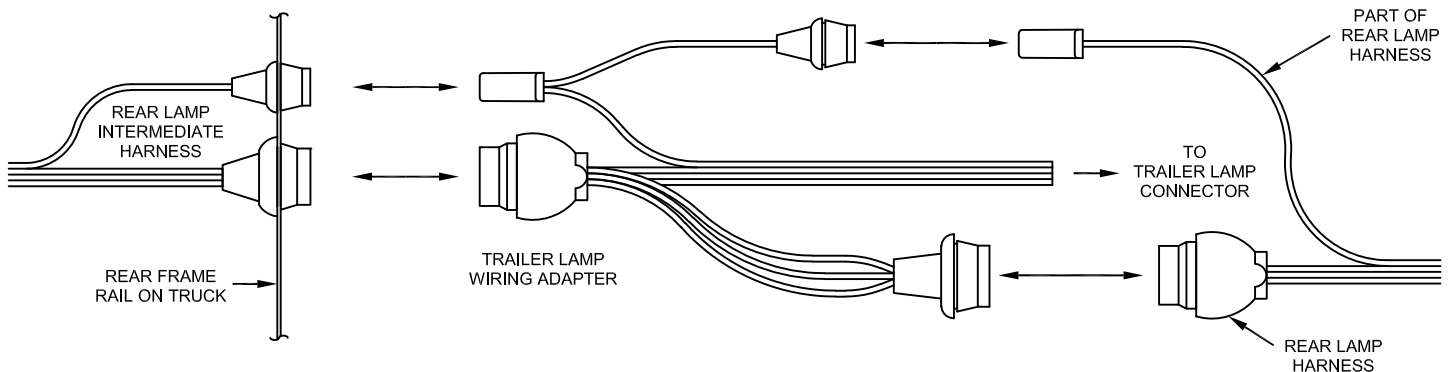


FIGURE 2

TRAILER WIRING ADAPTER INSTALLATION INSTRUCTIONS



TITLE
 INSTRUCTION SHEET
 TRAILER WIRING ADAPTER

PART NO.
92967467